

ADDENDUM RT-4546AA & RT-4546AW

Arm & Wrist Supports for Use with the Access[™] Supine





Access is a trademark of Qfix.

GENERAL PRECAUTIONS

WARNING STATEMENTS

! WARNING ! NO MODIFICATION OF THIS EQUIPMENT IS ALLOWED. IF ANY PART OF THIS DEVICE EXPERIENCES A CATASTROPHIC LOAD, APPEARS DAMAGED OR FUNCTIONS IMPROPERLY, DISCONTINUE USE IMMEDIATELY AND CONTACT QFIX AT +1 484-720-6053 OR TECHSUPPORT@QFIX.COM.

! WARNING ! DO NOT ALLOW PATIENT TO ADJUST POSITION USING THE ARM AND WRIST SUPPORTS.

! WARNING ! NEVER LIFT OR CARRY THE DEVICE BY HOLDING THE ARM OR WRIST SUPPORTS.



TRAPPING ZONES

- Trapping zones may occur when adjusting the Arm Support or Wrist Support height.
- Trapping zones may occur when adjusting the Arm Support or Wrist Support angle.

OPERATING INSTRUCTIONS

SETUP

ARM SUPPORT

- 1. To attach the Arm Support pull on Rotation Lever and insert into one of the two locations (marked with "X" and "Y"). (Fig. 1)
- 2. To adjust the Rotation of the Arm Support, pull on Rotation Lever, and rotate the Arm Support to the desired angle, and then release. (Fig. 2 & 3)
- 3. To adjust the height, push up on the Arm Support, and it will ratchet into place. (Fig. 4)
- To lower the Arm Support press in on the button and slide the housing along the base to the desired position. (Fig. 5)
- 5. To adjust the length of the arm, depress the button located under the support pad and slide along the arm, releasing the button once in the desired position. (Fig. 6, 7 & 8)



FIG. 1



FIG. 4



FIG. 7



FIG. 2



FIG. 5



FIG. 8



FIG. 3



FIG. 6

OPERATING INSTRUCTIONS

SETUP

WRIST SUPPORT

- 1. To attach the Wrist Support, align both pegs on the bottom of the Wrist Support with the two corresponding holes in the Patient Surface. (Fig. 9)
- 2. Twist the lower portion of the Wrist Support clockwise until it locks into place. (Fig. 10)
- 3. To reposition the upper portion of the Wrist Support, turn the knob counter-clockwise to loosen. (Fig. 11)
- 4. Swivel the upper portion to the desired position, then tighten the knob by turning it clockwise. (Fig. 12)
- 5. To reposition in a different location, turn the bottom portion of the Wrist Support counter-clockwise, until unlocked, remove the Wrist Support and repeat steps 1–2.



FIG. 9



FIG. 11



FIG. 10



FIG. 12

OPERATING INSTRUCTIONS

REMOVAL

RT-4546AA — ARM SUPPORT

- 1. Pull on Rotation Lever, and rotate the Arm Support to the unlock position.
- 2. While pulling on Rotation Lever, lift the Arm Support out of the locating hole.

RT-4546AW - WRIST SUPPORT

- 1. Turn the bottom portion of the Wrist Support counter-clockwise, until unlocked,
- 2. Lift the Wrist Support from the locating holes.

PARTS LIST

RT-4546AA — Arm Support

- 2005353 Foam Arm Cup Pad, Wrap-around
- 2006857 O-ring, 1.5" Pack of 10

RT-4546AW — Wrist Support

• 2005386 – Foam Wrist Cup Pad, Wrap-around

SETUP SHEET

RT-4546: Access Supine Breast & Lung, RT-4546MRI: Access Supine MR Breast & Lung, RT-4546-01: Access Supine Breast, or RT-4546-02: Access Supine Breast & Lung without Grid

Patient Name:	
Patient ID #:	Setup by:
Physician:	Date:
Comments:	
1. Used with the ArmShuttle: Yes No (if yes,	use ArmShuttle Setup page and skip to 8)
2. Location of Arm Supports (select one)—Patient's Left: X	Y Patient's Right: X Y
3. Angle of Arm Supports (range): Patient's Left	Patient's Right
4. Height of Arm Supports (number 1–8): Patient's Left	Patient's Right

- 5. Length of Arm Supports (select one): Patient's Left: A B C Right Side: A B C
 6. Location of Wrist Supports (letter from A to H): Patient's Left Patient's Right
- 7. Angle of Patient Surface (select one):
 0°
 5°
 7.5°
 10°
 12.5°
 15°
 20°
 25°

 8. Location of head rest (number 1–28):
 5°
 5°
 10°
 12.5°
 15°
 20°
 25°
- 9. Is a Bottom Stopper used? Yes No If yes, what setting? (number 1–8)
- 10. Indexed to simulation or treatment table? Yes No If yes, Index notch setting
- 11. Locating bar pin location (select one): A B C
- 12. Side marking laser location:



440 Church Road Avondale, PA 19311 USA www.Qfix.com

- **4** +1 484.720.6053 / 800.526.5247
- +1 610.268.0588 / 800.831.8174

Sales@Qfix.com

2008087_EN_D 2021-08